

SENCOR®

SRD 2215




INSTRUCTION MANUAL

USB MICRO SD DIGITAL FM RECEIVER

EN

CONTROL LOCATION

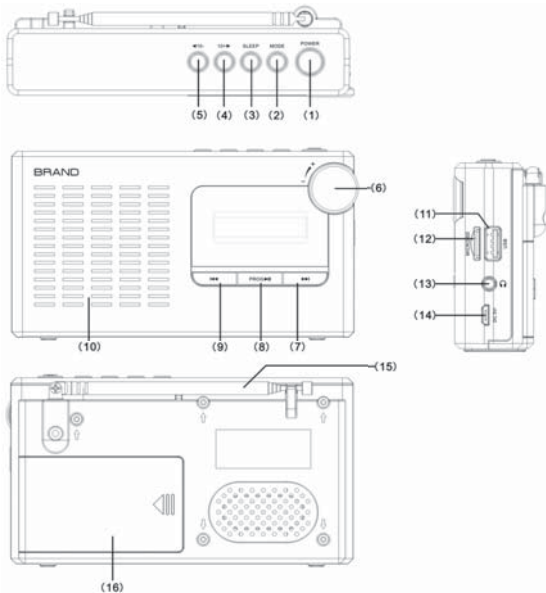

1. POWER (ON / OFF)
2. MODE
3. SLEEP
4. TURNING10+>
5. TURNING<10-
6. VOLUME CONTROL
7. NEXT ►►
8. PROGRAM / PLAY / PAUSE ►||
9. PREVIOUS ◀◀
10. SPEAKER
11. USB CONNECTOR
12. MICRO SD CARD SLOT
13. HEADPHONE JACK
14. MICRO-USB DC JACK
15. ROD ANTENNA
16. BATTERY COMPARTMENT

OPERATING INSTRUCTION

POWER SUPPLY

AC Adaptor Operation (Optional item)

Insert one end of the AC adaptor to the Micro-USB DC socket of the unit, and the other end to the power supply. The unit will be automatically in standby mode when connecting to AC power.

If a 5V rechargeable 800mAh battery is inserted inside the battery compartment, it will be charged up automatically when the unit is connecting to AC power.

To disconnect the set from the AC supply completely, withdraw the AC adaptor from the wall outlet.

Warning:

Before using the unit, check that the local mains supply is compatible with the unit. Do not plug or unplug the power cable when your hands wet.

When planning not to use the unit for long periods of time (i.e. vacation etc.) disconnect the plug from the wall outlet.

Rechargeable Battery Operation

Open the battery compartment and insert as indicated in the compartment one Rechargeable Batteries, Li-ion 3.7V

Rechargeable Battery Charging

Connect the unit by inserting the USB cable into DC 5V IN jack and inserting the other end into the USB interface or USB charger. The charging time is around 2 hours. The charging indicator will flash during battery charging.

To use 5V AC/DC adapter for external DC charging, plug the connecting cable to the DC jack. (Voltage adapter is an optional accessory. Do not charge the battery with the AC/DC adapter for more than 24 hours.)

IMPORTANT

If the unit has not been used for a long period of time, the rechargeable battery may be completely discharged into a "sleep mode" condition. This is the characteristics of all the rechargeable battery. For the first time to recharge (to wake up) the battery, it is recommended to charge for a period exceed 5 hours but not exceed 24 hours.

Normal Operation

1. Press **POWER** to switch on the radio.
2. Press **MODE** to select FM, Micro SD or USB.
3. The display shows the radio station details throughout the radio mode.
4. Select your station by using **TUNING** < / >.
5. Adjust the sound with **VOLUME CONTROL**
6. Press **POWER** for 3 seconds for power off.

Sleep Function

1. Press and hold **SLEEP** to select a time. For example, when the LED display shows 15 minutes. The radio turns on and then turns off automatically after 15 minutes.
2. To select a longer playing time, press **SLEEP** to select 15 / 30 / 45 / 60 / 75 / 90 minutes or OFF.
3. To turn off the radio at any time, press **POWER**.

FM MODE

Tuning

Manual tuning

Press **TUNING** < / > briefly, until the right frequency is found.

Automatic tuning

1. Press and hold **TUNING** < / > until the display frequency starts to run.
2. When a station of sufficient strength has been found tuning stops, or you can stop automatic tuning by pressing **TUNING** < / > again.

Presets

You can store the frequencies of up to 50 radio stations in the memory, (50 in FM wave bands). A stored frequency can be erased from the memory by storing another frequency in its place.

Automatic Preset

1. Press and hold down **PROG** until the display frequency starts to run.

Manual Preset

1. Tune to your desired station (See **Tuning**).
2. Press **PROG** once to enter programming mode.
3. Press **◀◀ / ▶▶** to select the desired memory location.
4. Press **PROG** once again to confirm the selected station.
5. To listen to a preset station:
 - Press the **◀◀ / ▶▶** for selecting your desired station.

To improve reception:

- For FM, pull out the telescopic aerial. To improve FM Reception incline and turn the aerial, reduce its length if the FM-signal is too strong (very close to a transmitter).

USB, MICRO SD CARD PLAYBACK

Able to decode and playback all MP3 files which stored in the memory media with USB connector or MICRO SD Card Slot.

1. Press **MODE** to select USB or SD.
2. Before connecting the USB media to the unit, make sure the port is in correct direction and will connect. Or insert MICRO SD Card straightly without bending.
3. The system will automatically start reading the MP3 files in the USB Storage Media or MICRO SD Card.
4. Press **◀◀ / ▶▶ / ▶||** buttons for Previous / Next functions / Play & Pause.

Note: *Wrongly connect the USB Storage Media or MICRO SD Card upside down could damage the unit or the USB Storage Media or MICRO SD Card. A locked MICRO SD Card cannot be detected or playback.*

Aux-out

You may connect headphone (not included) to 3.5mm **HEADPHONE JACK**. The loudspeaker is then muted.

Avoid listening to headphones at high volume levels to prevent possible hearing damage.

SPECIFICATIONS

| | |
|-----------------------|------------------------------------|
| Frequency range: | FM : 87.5-108MHz |
| Speaker: | 1.75 inches, 4 ohm dynamic speaker |
| Power Output: | 1.2W RMS |
| AC Operate: | DC 5V Adapter |
| Rechargeable Battery: | DC Li-ion 3.7V 800mAh |

PRECAUTIONS

1. For AC operation, make sure the voltage is compatible. Always use the supplied AC power cord; never use other AC power cord.
2. Always disconnect the AC power cord from the AC power source when it is not in use.
3. Do not leave the batteries in the compartment for a long time. Remove the batteries to avoid leakage and damage.
4. Do not expose the unit to extreme temperature nor high humidity to ensure normal functioning for a long lifetime. For instances, never place the unit in bathing areas nor around stoves and radiators.
5. If you find the unit is not working properly, please take it to your nearest services center. Do not attempt to repair by yourself.

Warning:

*To prevent fire or shock hazard, do not expose the unit to rain or moisture.
To avoid electrical shock, do not open the cabinet, refer to service agent or qualified engineer only.*

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



The product meets EU requirements.

Hereby, FAST ČR, a.s. declares that the radio equipment type SRD 2215 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: www.sencor.com

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

The original version is Czech.

Manufacturer: FAST ČR, a.s., Černokostecká 1621, Říčany CZ-251 01

SENCOR®

EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Authorized service centers

Visit www.sencor.com for detailed information about authorized service centers.